

One pot to  
do them all...

Fry, Sauté, Boil,  
Steam, Thaw, Poach,  
Stew, Simmer

**FUTURA**  
SMART POT  
with SMART APP

Instruction Manual  
With Guarantee Card



Kadhi Pakora



Vegetable Ramen



Chicken Biryani



Macher Jhol



Almond Broccoli Soup



Chicken Stroganoff



Alu Posto



Chawal ki Kheer



Potato and Leek Soup



Minestrone Soup



Egg Curry



Aloor Dum



Masala Khichdi



Vegetable Thai Curry



Matar Paneer



Rajma Masala



Rogan Josh



Vermicelli Pudding



Smart app with  
over 100 tested recipes



### Warm (Keep Warm Mode)

Keep food warm at the right temperature



### Rice (Smart Rice Cooking Mode)

Automatically cooks rice/rice-based recipes by controlling temperature and time for perfect cooking results



### Cook Time

Set timer for your desired cooking time




### Chef Mode

You're in-charge! Adjust the power and time setting as per *your* recipe.



Futura App

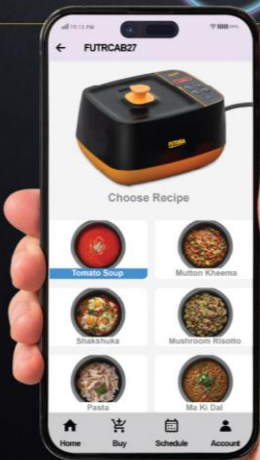

## How the Futura Smart App helps you

- Choose from over 100+ pre-programmed recipes
- See entire list of ingredients with quantities
- At each step, see what exactly is to be done before you start
- Once you start the step, app keeps track of time and beeps to alert you of the next step
- Automatically shuts off when rice is cooked or as per timer.
- Start the Smart Pot from your office desk or while going home - auto starts on Wi-Fi. Slow cook or heat food even if not at home

# Contents

	Page		Page
Important Safeguards	3	How to Use	9
Know Your Futura Smart Pot	5	Switching Between Modes	11
Technical Specifications	5	Wi-Fi Quick Connect Guide	12
Features and Benefits	6	Care and Cleaning	16
Trial Run	7	Troubleshooting	17
Introduction	8		

## **Any Questions or Comments? Contact:**

### **Hawkins Cookers Limited**

Udyog Mandir 2, Pitamber Lane, Mahim, MUMBAI 400 016, INDIA

TEL (91 22) 2444 0807 FAX (91 22) 2444 9152

EMAIL: [kitchen@hawkins.in](mailto:kitchen@hawkins.in)

WEBSITE: [www.buyhawkins.in](http://www.buyhawkins.in) [www.hawkins.in](http://www.hawkins.in)

© 2026 and All Rights Reserved. 'Futura' and 'Hawkins' are the Registered Trademarks of Hawkins Cookers Limited in India and in various other countries throughout the world. CIN: L28997MH1959PLC011304.

# Important Safeguards

1. Read all instructions before use.
2. **Do not** use the Smart Pot for any use other than its intended use.
3. **Do not** immerse the Smart Pot, cord or plug in water or other liquid, to protect against fire, electric shock, equipment damage and injury. **Do not** operate the Smart Pot with wet hands/gloves.
4. **Do not** touch hot surfaces – the heating plate is likely to be hot after use.
5. The convexity at the base of the cooking vessel is designed for proper contact with the heating plate. Please do not try to flatten it – poor contact between pan and heating plate will lead to malfunction.
6. **Do not** switch the Smart Pot ON without the cooking vessel in place.
7. **Do not** operate on an inclined or uneven surface – use a dry, level surface, well away from the countertop edge.
8. **Do not** touch the lid during cooking, it may be hot or emit hot steam through the steam vents, which may cause a scalding injury. **Do not** cover/block the steam vents during cooking.
9. Do not allow the Smart Pot to boil dry.
10. Do not cook in the cooking vessel on a gas or electric cooktop – it may warp and be rendered ineffective for the Smart Pot. Do not cook in any other container in the Smart Pot.
11. If the supply cord is damaged, it must be replaced by the cord supplied by the manufacturer.
12. **Do not** place the Smart Pot or cord on or near a functioning gas or electric cooktop, oven or microwave. **Do not** let the cord hang over the table or counter edge, where it can

snag or trip unintentionally. Untie knots and/or untangle cord before use.

**13.** The Smart Pot is not intended for use by children, or persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge of its use, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

**14.** Unplug from socket when not in use, before cleaning or before lifting the cooking vessel. Allow to cool before handling and cleaning. To remove plug from wall outlet, hold plug – never pull cord. Ensure the appliance is completely dry before using it again.

**15. Do not** wash the Smart Pot, cooking vessel or any of parts thereof in a dishwasher. Hand wash only as instructed herein. **Do not** clean the cooking vessel with harsh cleansers, steel wool pads, or other abrasive materials.

**16.** This appliance is designed for regular domestic use.

**17.** Exercise caution while removing the lid during cooking.


**18. Do not** overfill the cooking vessel – if it is overfilled, boiling food may spill out.

**19.** It is recommended to operate the Smart Pot with a socket that is properly earthed.

**20.** Ensure that there is no water/food particles/dust between the cooking vessel and the heating plate. Such particles may affect cooking results and damage the heating components.

**21. SAVE THESE INSTRUCTIONS.**

# Know Your Futura Smart Pot

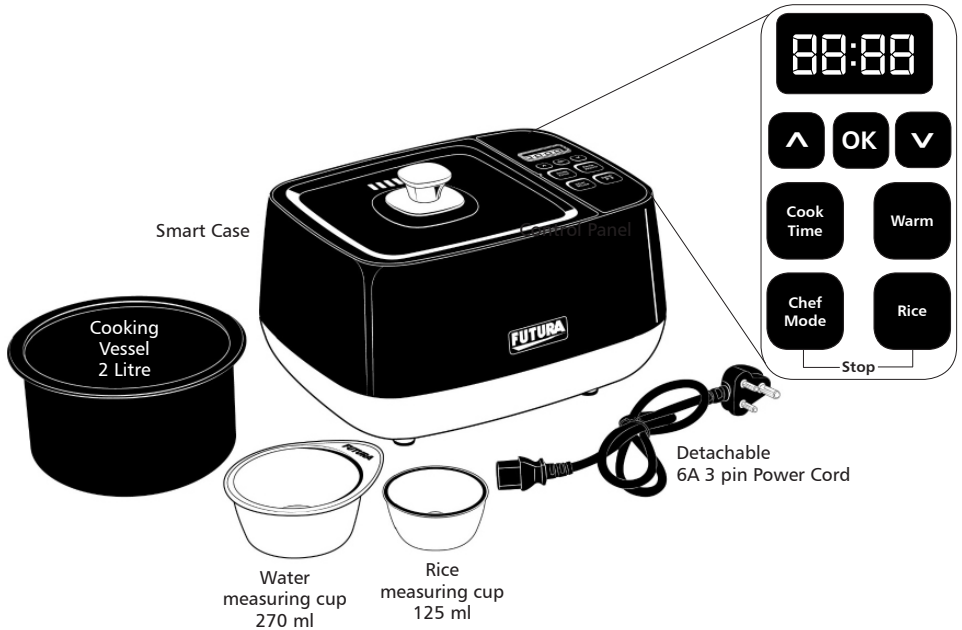

## Technical Specifications

<b>Capacity</b>	2 Litre
<b>Wattage</b>	750 W
<b>Plug and Wire</b>	1 meter, 3 pin C-13, 6A cord
<b>Operating voltage</b>	230V, 50 Hz
<b>Guarantee</b>	1 Year
<b>Vessel Material Grade</b>	AL 31000

# Features & Benefits

## Futura Smart Pot

### 1. Warm (Keep Warm Mode)

Keep food warm at the perfect temperature (between 55°C and 65°C) for up to 1 hour

### 2. Rice (Smart Rice Cooking Mode)

Automatically cooks rice/rice-based recipes by controlling temperature and time for perfect cooking results

### 3. Chef Mode

You're in charge! Adjust the power and time setting as per your recipe. Offers 7 adjustable power levels for better control – delivering a gas stove-like cooking experience, ideal for slow-cooking dals and meats

### 4. Cook Time

Set timer for your desired cooking time

### 5. Pause Function

Pause and switch between modes easily during cooking

### 6. Portable, Cool-Touch


Carry it to the table, your next potluck, on holiday or to work!

## Futura Smart App

- Choose from over 100+ pre-programmed recipes
- See entire list of ingredients with quantities
- At each step, see what exactly is to be done before you start
- Once you start the step, app keeps track of time and beeps to alert you of the next step
- Automatically shuts off when rice is cooked or as per timer
- Start the Smart Pot from your office desk or while going home – auto starts on Wi-Fi. Slow cook or heat food even if not at home

# Trial Run

- Unbox Smart Pot. Remove all packaging material.
  - Check and confirm that the power outlet is earthed, and can bear the rated load of 750 Watts.
  - Remove lid. Clean and wash the Cooking Vessel, and add 2 cups/480 ml water.
  - Place Cooking Vessel in the Smart Case on a flat, level surface and close the lid.
  - Attach the detachable power cord to the Smart Pot, and plug into the power outlet.
  - Set Power to C:P7 to boil water (see "How to Use", page 9).
  - Once steam emerges from the vent, let boil for 5 minutes. Turn off Smart Pot by pressing 'Chef Mode' and 'Rice' together for 3 seconds.
  - Carefully remove the hot Cooking Vessel and discard water.
- ☑ Your Smart Pot is now ready for use.

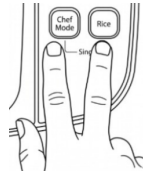

## Notes:

- Blinking display indicates: awaiting user feedback.
- Blinking LED indicates: Smart Pot is currently dormant/paused.
- Blinking ':' indicates: Smart Pot is currently in operation.
- How to STOP: Press 'Chef Mode' and 'Rice' simultaneously for 3 seconds.

# Introduction



The Futura Smart Pot is designed to offer flexibility, precision, and convenience through its thoughtfully developed cooking modes. Whether you prefer complete control over the cooking or a hands-free experience, these modes cater to a wide range of cooking styles and recipes. From manually adjusting power for customised dishes to using intelligent programs for everyday staples like rice, the Smart Pot adapts to your needs. It also includes features to assist with timing and to keep food warm after cooking, ensuring your meals are ready to serve when needed.

## CHEF MODE (Manual Mode)

Chef Mode puts you in-charge – it enables the user to set the desired power level for cooking. Gain precise control over power settings for cooking your way. There are seven power levels as shown in the table alongside. The timer in this mode functions as a running timer and cannot be preset.

Power Level (PX)	Power (in Watts)
P1	100
P2	200
P3	300
P4	375
P5	450
P6	600
P7	750

## COOK TIME

Cook Time function works with Chef Mode, allowing you to set a timer for your cooking as per your requirements and your recipe.


## RICE (Smart Cooking Mode)

Rice Mode is an automatic mode. It needs no supervision. The Smart Pot will automatically sense the cooking stages and will indicate 'END' when the rice or rice-based recipe is ready.

## WARM (Keep Warm Mode)

Warm function automatically maintains the temperature of cooked food between 55°C and 65°C by adjusting the power level accordingly. Food is kept warm in this mode for up to 1 hour, ensuring it stays ready to serve without overcooking.

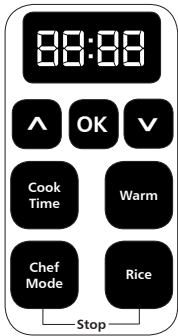

# How to Use




## Switch ON

- 1 Switch ON at wall outlet
  - 2 Beeps 📢
  - 3 Displays **88:88**
  - 4 Thereafter displays ':'
- ✓ Ready to use

## Switch OFF

- 1 Press and hold  +  for 3 seconds  
(See Control Panel alongside)

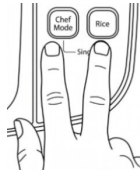





- 2 Beeps 📢
- 3 Displays 'STOP'



✓ OFF. Switch OFF at wall outlet.

NOTE: A 'beep' sounds whenever any key is pressed.



## Turn Chef mode ON


- 1 Press , LED blinks
- 2 Displays 'E:P'
- 3 Press  to continue
- 4 Press  or  to select power level
- 5 Displays 'CHEF' first and 'E:PX' and elapsed time alternatively

## NOTE:

- 'E' indicates Chef mode and 'PX' indicates Power Level.
- Elapsed time will be in 'mm:55' format for the first 60 minutes, thereafter 'H:mm'.
- Power can be changed using  or .





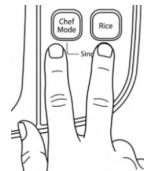

## Turn Off Chef mode

- 1 Press and hold  +  for 3 seconds
- 2 Beeps 📢,
- 3 Displays 'STOP'






## Set Cook Time


- 1 Press , LED blinks

- 2 Displays 'H0:00', set time
- 3 '0' (left of colon) will blink initially to set hours. Change hours using  or .
- 4 Press  to confirm hours, then toggle to minutes.
- 5 '00' (right of colon) will start blinking and digit before colon will show selected hours.
- 6 Minutes can be changed using  or  in steps of 1 minute up to 15 minutes, thereafter, in steps of 5 minutes. Press  to confirm.
- 7 The display will first show 'CHEF' and then show remaining time and the Power level set as 'CT:PX' alternatively.


## Turn Cook Time OFF

- 1 Press  for 3 seconds
- 2 Beeps 
- 3 LED over  goes off


### NOTE:

- The Smart Pot will switch OFF when the timer reaches zero, beeps , displays 'END'

## Turn Rice mode ON

- 1 Press  LED blinks
- 2 Displays 'RICE' and ':PT' alternately

 
### NOTE:

- Rice mode will turn off once the rice is cooked, beeps , LED goes OFF and 'END' is displayed.

## Turn Warm mode ON

- 1 Press  LED turns ON
- 2 Displays elapsed time '00:55'

### NOTE:






- Warm mode will turn off when the timer reaches zero, beeps , LED goes OFF and 'END' is displayed.

## Pause Function






- 1 Press current mode, LED blinks
- 2 Display shows 'PAUS'
- 3 To resume, press current mode again

## Switching Between Modes

### 1 Switching from Chef mode to Rice






- Press 
  -  LED blinks, press 
  -  LED goes OFF,  LED remains ON
- ✓ Rice function starts

### 2 Switching from Chef mode to Warm







- Press 
  -  LED blinks, press 
  -  LED goes OFF,  LED remains ON
- ✓ Warm function starts

NOTE: If Chef mode is running with Cook Time function, moving to Warm will terminate the Chef mode and not wait for the timer to finish.







### 3 Switching from Warm to Rice

- Press 
  -  LED blinks, press 
  -  LED goes OFF,  LED remains ON
- ✓ Rice function starts




### 4 Switching from Warm to Chef mode

- Press  LED blinks, display shows power level selection option
  - Press  or  or  to set power level
  -  LED goes OFF,  LED remains ON
- ✓ Chef mode starts

### 5 Switching from Rice to Chef mode

- Press  LED blinks, display shows power level selection option
  - Press  or  or  to set power level
  -  LED goes OFF,  LED remains ON
- ✓ Chef mode starts

### 6 Switching from Rice to Warm


- Press 
  -  LED blinks,  LED remains ON
- ✓ Warm function begins immediately after rice function ends

NOTE:

If you need to switch from Rice to Warm immediately, stop Rice by pressing  for 3 seconds, press  LED turns ON and warm function starts.


# Wi-Fi Quick Connect Guide

## Step 1: Download and Install the Futura App

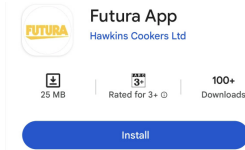


## Step 2: Log in using your mobile number.


1. Enter number

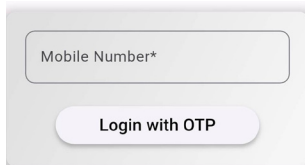


2. Enter OTP

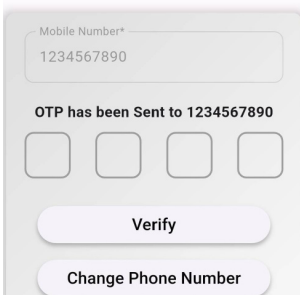

## Step 3: Add Your Device

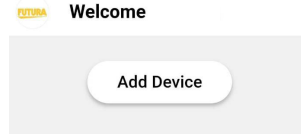

## Step 4: Turn On Wi-Fi and Location on your mobile phone

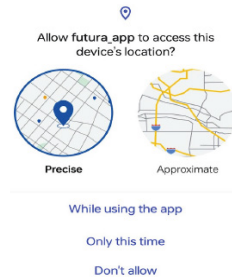

## Step 5: Configure Wi-Fi on Smart Pot


Press **▲** + **▼** for 3 seconds. Display will show 'H05T'. Click "Yes" on the app and then select "Proceed".

Yes, the device display shows Host

Proceed

## Step 6: Connection:


Select your Smart Pot device ID (e.g., FUTSA0048) from the list to begin pairing. Once connected, Smart Pot will display 'CONN' along with a long beep.

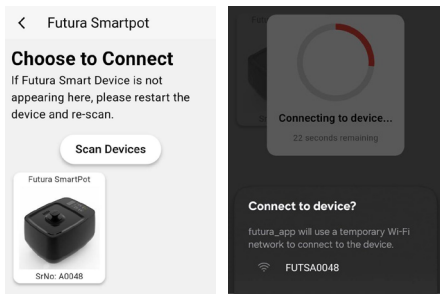


## Step 7: Connect to Wi-Fi

From the available networks, select your Wi-Fi, enter the password, and tap "Connect".

If you do not have access to Wi-Fi, enter your phone hotspot name and password under Manual Wi-Fi Setup as Wi-Fi name and

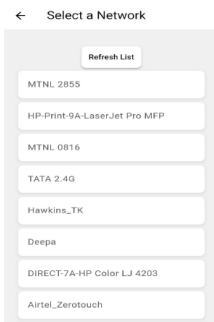


password, and tap to "Connect". On the next screen turn ON the hotspot on your phone.

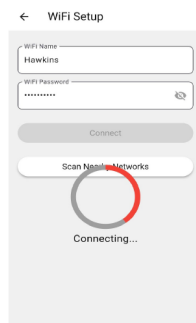


## Step 8: Device Initialization

Smart Pot displays 'DONE' along with a long beep and the app will display "Connected Successfully".

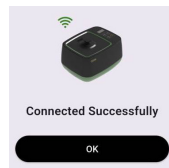




## Step 9: Start Cooking

You can now start cooking in your Smart Pot with either Custom Cooking option or choose from the list of recipes given in the App.

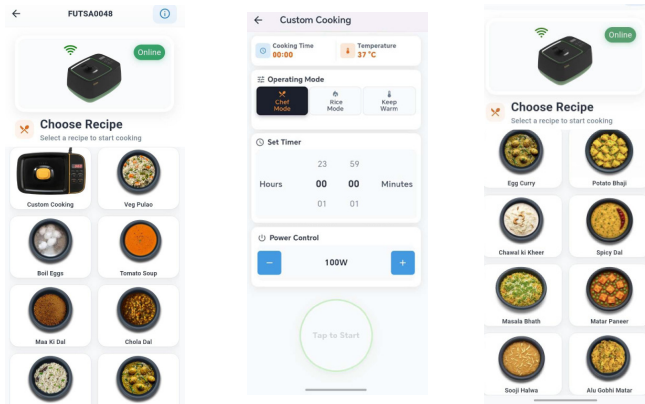

There are 3 operating modes in Custom Cooking as below:

- 1. Chef Mode:** You can set desired power level and time and tap to start cooking.
- 2. Rice Mode:** This automatic mode lets you start cooking with a single tap. Once your rice or rice-based recipe is perfectly cooked, the Smart Pot will beep and switch off automatically.
- 3. Keep Warm:** In this mode, you can select time and tap to start. After set time is over, the operation will end with a beep.

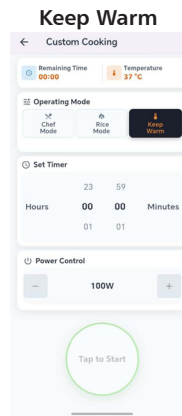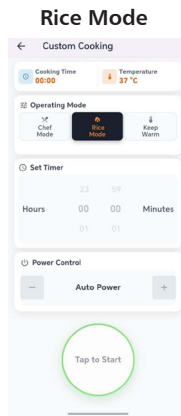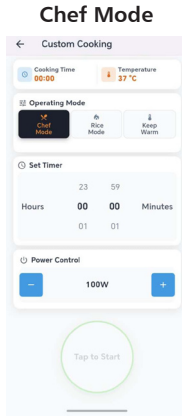


## Recommendation/Notes:

- For best performance, use the Futura App with a stable Wi-Fi connection.
- A weak or unstable internet connection may cause delays or interruptions while sending commands to the Smart Pot.
- Ensure your Wi-Fi network is strong and properly configured before using the app for smooth operation.

## Care and Cleaning

- Unplug the power cord and cool down the Smart Pot before cleaning.
- Lid becomes hot during use – handle with care.
- Clean the cooking vessel and lid with a non-abrasive kitchen cleanser and a plastic scrubber. Wash and wipe dry.
- Remove bubble breaker from the lid. Wash in hot soapy water. Rinse and wipe dry.
- Never immerse the outer body of the Smart Pot in water as the water may enter into the electrical parts leading to electric shock and/or malfunction.
- The outer body and heating plate of the Smart Pot should be wiped clean only with a soft clean cloth to remove any spillover of food.
- The lid is provided with vent on the top. This is required for venting the steam out while cooking. Make sure that the vent holes are not blocked.
- Do not wash Smart Pot or any of its parts in a dishwasher. Hand wash only.

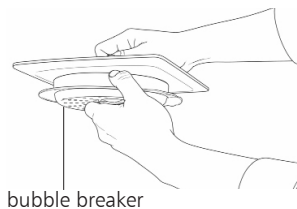

# Troubleshooting

## Error Codes displayed on the LED Indicator

The Smart Pot has in-built protections to minimise chances of system failure, which are displayed in the form of specific errors.

<b>Error</b>	<b>Description</b>	<b>Action to be taken</b>
<i>E1:1</i>	Overheating – Rice Mode	Turn OFF the Smart Pot and let it cool for a while
<i>E1:2</i>	Overheating – Chef Mode	
<i>E2:1</i>	Wi-Fi Setup Timeout	Connect the Smart Pot using the “Futura App”
<i>E2:2</i>	Invalid Wi-Fi Credentials	Setup Wi-Fi using the correct Credentials (SSID and Password)
<i>E2:3</i>	Server Connection Lost	Restart the Router and try again



Smart Case




Detachable  
6A 3 pin Power Cord



Water  
Measuring cup  
270 ml

Rice  
Measuring cup  
125 ml

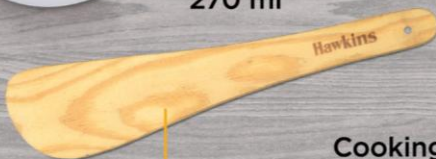

Wooden Spatula



Cooking vessel  
2 Litre



Mitts to hold  
hot cooking vessel

**FUTURA**  
SMART POT with SMART APP

**1 Year**  
Guarantee  
TERMS AND CONDITIONS

GUARANTEE  
NO.

For details of  
BIS Certification  
Please visit  
[www.bis.gov.in](http://www.bis.gov.in)

**1.** The Futura Smart Pot with Smart App is guaranteed for a period of one year from the date of first purchase by the user against defects in material and workmanship. **2.** Fair wear and tear is not a defect. The finish of the plastic or metal parts of the Smart Pot may stain, fade, scratch or dull and are not guaranteed; this will not affect the functioning of the Smart Pot. Damages caused by external electrical faults, surges, mishandling etc., are not covered under this guarantee. **3.** Smart Pot must be used properly in accordance with the printed instructions contained herein. In particular, all instructions given in the Caution alongside must be followed. **4.** Smart Pot under complaint must be returned to us or our authorised Electrical Service Centre at the user's cost along with this Guarantee. The serial number on the Guarantee must match the serial number on the bottom of the Smart Pot. In case you register your guarantee online (using the QR code below) the facility to repair or replace will be available at any Hawkins Authorised Service Centre. **5.** Genuine Parts of our manufacture must be used at all times.

**6.** Smart Pot should not be damaged, weakened, modified or repaired by any unauthorised person.

**7.** Subject to the above mentioned terms and conditions, we shall repair or replace free of cost any defective part or parts or the whole Smart Pot at our option.

#### CAUTION

- 1.** Do not immerse Smart Pot, cord or plug in water or other liquid, to protect against fire, electric shock, equipment damage and injury. Do not operate the Smart Pot with wet hands/gloves.
- 2.** Do not switch the Smart Pot ON without the cooking vessel in place.
- 3.** Do not operate on an inclined or uneven surface - use a dry, level surface, well away from the counter top edge.
- 4.** Do not operate Smart Pot if body, cord or plug is damaged, if it malfunctions, or if it is dropped or damaged in any manner.
- 5.** Do not overfill the cooking vessel, if it is overfilled, boiling food may spill out.
- 6.** Do not allow the Smart Pot to boil dry.
- 7.** Do not wash the Smart Pot, cooking vessel or any of parts thereof in a dishwasher. Hand wash only as instructed herein. Do not clean the cooking vessel with harsh cleansers, steel wool pads, or other abrasive materials.

SOLD BY  
Name & Address  
of the Dealer  
& stamp

Date of Purchase:



Scan to register guarantee